



# BONAIRE®

The leaders in heating and cooling

## FREQUENTLY ASKED QUESTIONS

### How to Pair a wireless Navigator Remote controller to the Transceiver.

Pairing the Wireless remote to the appliance must be performed to allow the system to work. Pairing is similar to the pairing of blue tooth devices and should be done by the installing contractor.

In the PAir state, the clock digits will indicate PAir and the temperature digits will show the appliance class and the last 2 digits of the serial number. The level bars indicate signal strength.

1. Connect the RF Transceiver to the control board.
2. Insert batteries into Remote handset.
3. Turn power **ON** to the appliance.
4. The transceiver will request to join with the controller for 30 minutes.

### The wireless remote controller must be put into a PAir mode to accept the transceiver joining the Navigator system.

5. Press and hold the **ENTER** button on the Navigator Controller for 3 seconds.
6. Press the **HEAT/COOL, MODE & SETUP** buttons in sequence and the display should show "PAir".
7. After a few seconds the controller should show "ro xx" (xx will be a 2 digit number).
8. Press the **ENTER** button to pair the transceiver and the remote controller.
9. After pressing the **ENTER** button, press the **ON/OFF** button.
10. After the **ON/OFF** button has been pressed, wait approximately 5 minutes before you turn on the appliance.

